



QUICK START GUIDE



Installation Manuals and Safety

This Quick Start Guide should be read in conjunction with the installation manual supplied with the heater.

A more comprehensive version with information about safety and Australian wiring compliance is also available – use the QR Code to download.

Always refer to the Manufacturer's Installation Manual for safety and more comprehensive installation instructions.



NOTE: All new Electrical installations must be undertaken by a competent person, meet the current regulations and be tested/certified. We direct attention to AS/NZS 3000:2018 Electrical Installations (known as the Australian/New Zealand Wiring Rules)

All Heatpac Installation Manuals and Programming guides are available for download at https://heatpac.com.au/dealer_files/

Unpacking

Turn carton upside down, then open and fit feet to base before unpacking




Heater Location

Choose location carefully – once installed it cannot be lifted or relocated easily.

Have power supply cables ready to connect through floor or wall behind the heater

Cable entry is through the rear on to the right hand side of the unit. Locate heater to align with the cable entry point if possible.

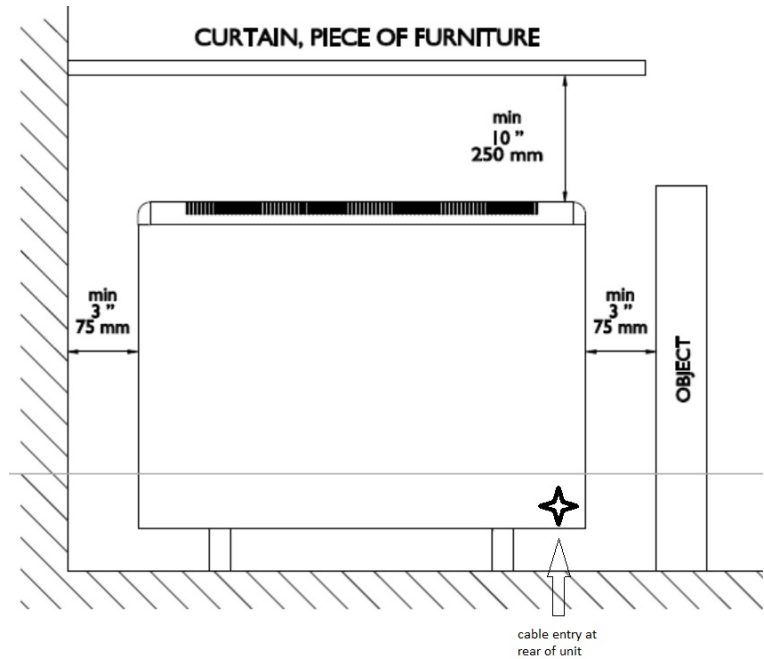


Remove the front panel carefully following the instruction manual to access the two keyhole openings on the rear of the heater from inside. Use hollow wall or masonry anchors to fix to the wall. Don't tighten the anchors until the core bricks have been installed and the heater has settled on its feet.

Install the bricks from the outer edges working into the middle to minimise disturbance to the soft insulation.

Once the core cells have been installed, then tighten the wall fasteners.




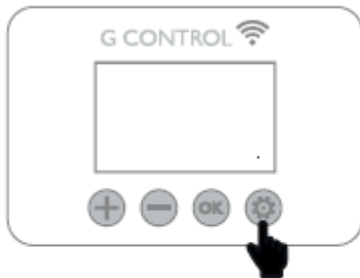
Heatboss 1.5kW

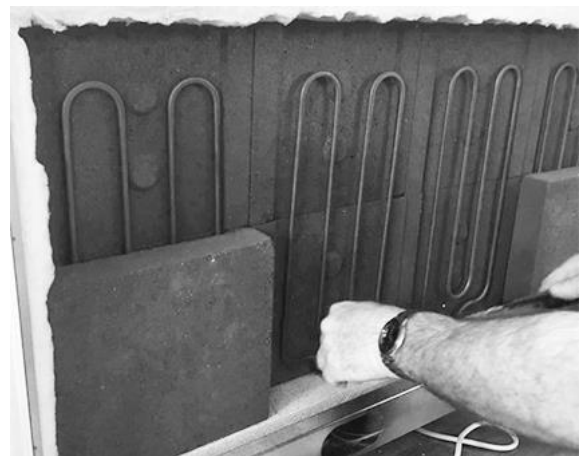




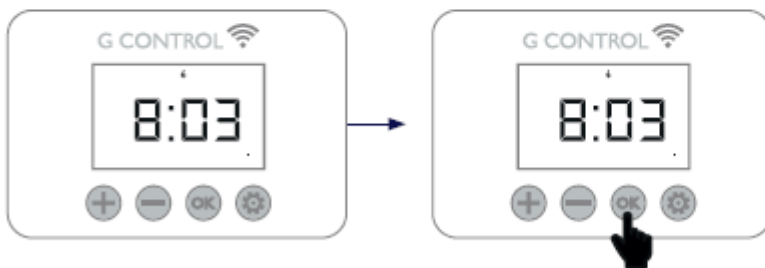
Heatboss 4kW


 

Step 1 Set the time and day of the week


1. Press any button to get the backlight on.
2. Hold the  button until "Func" is displayed Blinking







3. Using  or  buttons scroll until the time is displayed and press  button

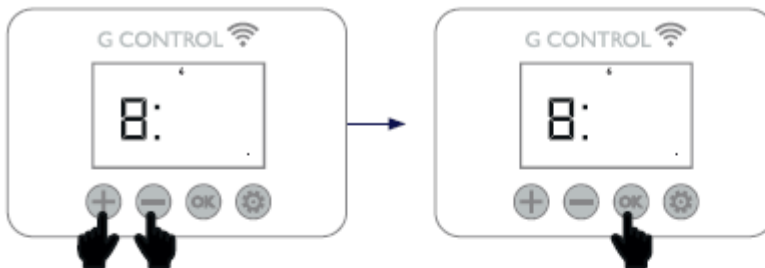


4. Again using the  and  buttons you can modify the hour and press  button to confirm and move to minutes.



5. Repeat step 4 but for the minutes and again press the  button confirm and move to setting the day.


6. Using the  and  buttons modify the days. Monday = Day 1 & Sunday = Day 7.
Once on the correct day press the  button to confirm.

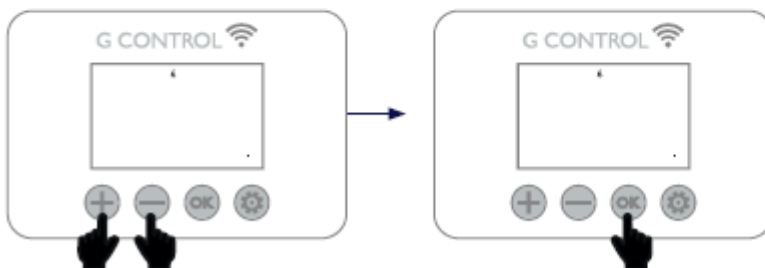



The Heater will exit automatically and return to the home screen.


Step 2 Leave the heater in Program mode

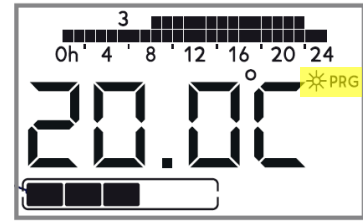

There are three modes the heater can operate in. Once the above steps are completed, we recommend setting the heater in program mode. This appears as the display below with most Icons on display.




Use these steps to set the heater in program mode -

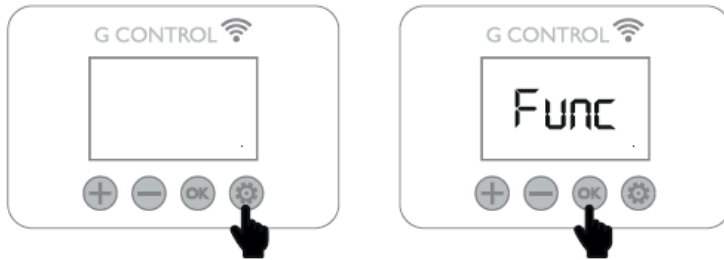1. Press any button to get the backlight on.
2. Hold the  button until "Func" is displayed Blinking then press 



3. Using  or  buttons you can select one of the 3 Modes.



4. Once your desired mode is selected press the  button to confirm



Step 3 – If unsuccessful do a factory re-set and repeat Step 1 and 2 above.

To reset the unit to factory default settings, hold  and  simultaneously until the message "SrES" is displayed. Confirm the reset with 

