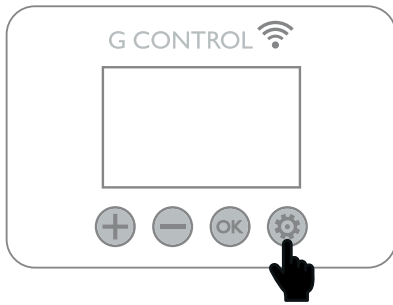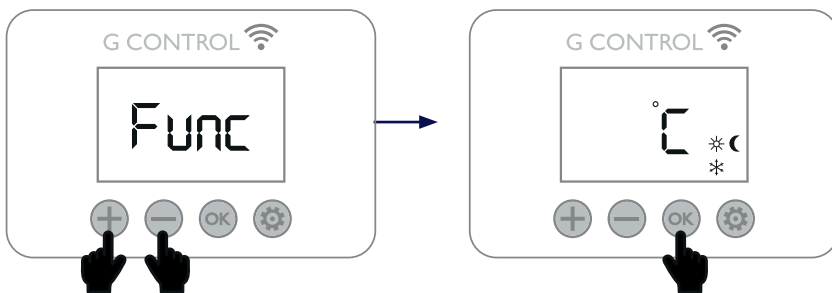# QUICK USER GUIDE - SETTING THE SET POINT TEMPERATURES
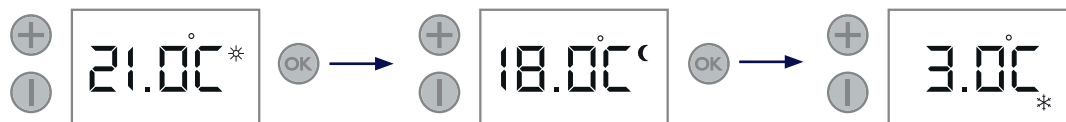
1. Press any button to get the backlight on.

2. Hold the ⚙ button until "Func" is displayed Blinking.

3. Using ⊕ or ⊖ buttons scroll through the menu until you see all three temp icons then press OK

4. Again using ⊕ or ⊖ buttons set your desired temperatures and press the OK button to confirm to go to the next temperature setting and repeat the process.

5. Once you have set all 3 temperatures press the ⚙ to exit.